

K O N Č A R

HR

EN

UPUTE ZA UPORABU INSTRUCTION MANUAL

SUŠILICE RUBLJA TUMBLE DRYERS

SR8MBKINV
SR8MDSKINV

KONČAR - KUĆANSKI APARATI d.d.
Karlovačka ulica 23, 10451 Pisarovina, Hrvatska, EU
T: + (385) 1 2484 555 F: + (385) 1 2404 102
kucanski@koncar-ka.hr www.koncar-ka.hr



ŠTOVANI KUPCI,

zahvaljujemo Vam na povjerenju koje ste nam ukazali kupnjom našeg proizvoda.



Za Vaše lakše snalaženje prilikom uporabe aparata, pripremili smo ove Upute za uporabu.

Molimo Vas da pažljivo pročitate ove "Upute za uporabu" jer ćete na taj način izbjeći greške, povećati uporabno trajanje aparata, štedjeti energiju i novac.

Upute su dostupne na web adresi: **www.koncar-ka.hr**

Upute za uporabu odložite na sigurno mjesto kako bi ih mogli koristiti i za buduće potrebe. Ako aparat prodate ili ustupite drugom vlasniku tada uz aparat priložite i ove upute.



POZOR! VRUĆA POVRŠINA!



POZOR! OPASNOST OD POŽARA!

U uputama za uporabu mogu biti opisani različiti tipovi aparata koji se međusobno razlikuju po opremljenosti i načinu rada, te su zbog toga uključena i neka poglavlja, crteži i podaci koji za Vaš aparat ne dolaze u obzir.

Pridržavamo pravo izmjena i grešaka u uputama za uporabu.

Tehničke specifikacije i ovaj priručnik podložni su promjenama bez prethodne obavijesti ili najave.

SADRŽAJ

UVOD

- 3 Važne opće informacije
- 3 Informacije o jamstvu
- 5 Sigurnosna upozorenja

POSTAVLJANJE I PRIKLJUČENJE APARATA

- 12 Opis proizvoda
- 13 Postavljanje i priključenje

UPORABA APARATA

- 14 Brze upute
- 15 Prije svakog sušenja
- 16 Upravljački elementi i njihova uporaba
- 17 Dodaci
- 19 Display
- 20 Programi
- 22 Potrošnja energije

ODRŽAVANJE APARATA

- 23 Čišćenje i održavanje
- 25 Problemi te njihovo moguće uklanjanje
- 27 Tehnički podaci

Važne opće informacije

Ovaj aparat je namijenjen isključivo za uporabu u domaćinstvu i sličnim okruženjima kao što su:

- priručne kuhinje za osoblje u trgovinama, uredima i drugim radnim okruženjima;
- korištenje od strane gostiju u hotelima, motelima i drugim smještajnim prostorima;
- gospodarske zgrade na farmama;
- objekti koji nude usluge noćenja s doručkom
- područja za komunalne uporabe u stambenim zgradama (zajedničke prostorije za pranje i sušenje rublja).

Aparat nije namijenjen uporabi u profesionalne (komercijalne) svrhe ili namjene koje nadilaze uobičajenu uporabu u domaćinstvu.

Ako se aparat ipak tako upotrebljava, tada proizvođač ne snosi nikakvu odgovornost, a jamstvo ne vrijedi.

Proizvođač ne snosi nikakvu odgovornost za ozljede ili oštećenja izazvana nepravilnim postavljanjem ili uporabom te ne priznaje pravo na jamstvo u slučaju nepridržavanja uputa za uporabu i nesavjesne uporabe aparata.

Proizvođač zadržava pravo promijeniti konstrukciju, mjere i težinu ako to smatra potrebnim radi poboljšanja kvalitete proizvoda, bez ugrožavanja osnovnih svojstava proizvoda i bez prethodne najave.

U uputama za uporabu mogu biti opisani različiti tipovi aparata koji se međusobno razlikuju po opremljenosti i načinu rada, te su zbog toga uključena i neka poglavlja, podaci i crteži koja za Vaš aparat ne dolaze u obzir.

ODLAGANJE PROIZVODA

Ovi proizvodi su razvijeni i proizvedeni uz uporabu kvalitetnih materijala i komponenti koje je moguće reciklirati i ponovo iskoristiti. Simbol s lijeve strane znači da se električni i elektronički aparati na kraju njihova uporabnog vijeka ne smiju odbacivati zajedno s ostalim kućnim otpadom.



Molimo da ovaj aparat predate lokalnoj tvrtki koja se bavi zbrinjavanjem otpada ili ga odnosi u reciklažno dvorište. Ovaj aparat zadovoljava EU direktivu (2012/19/EU) u svezi zbrinjavanja električnog i elektroničkog otpada (WEEE). Ovaj aparat zadovoljava EU RoHS direktivu (2011/65/EU).

Korisnik ne smije rastavljati aparat ili ostale komponente. Taj posao obavlja ovlaštena tvrtka koja se bavi recikliranjem takve vrste otpada.

POZORNOST ! Aparat sadrži zapaljivi plin (R290).

Kontaktirati ovlaštenu tvrtku koja se bavi recikliranjem takve vrste aparata.

Ambalaža je izrađena tako da ne ugrožava okoliš; ambalažni materijal je ekološki i može se preraditi, odnosno reciklirati. Nije dozvoljeno odlagati ambalažni materijal s ostalim kućnim otpadom, nego ga je potrebno odložiti na zato namijenjenom mjestu.



Informacije o jamstvu

Ako do nekog kvara na aparatu dođe tijekom jamstvene dobi, nemojte ga popravljati sami.

Reklamaciju odmah prijavite na jedno od servisnih mjesta jer u suprotnom može doći do većeg oštećenja aparata, za što proizvođač neće preuzeti nikakvu odgovornost.

Pri podnošenju reklamacije držite se teksta

Jamstvenog Lista. Najnovije informacije o servisnim mjestima nalaze se na web stranici **www.koncar-ka.hr**

Bez predaje pravilno popunjenog Jamstvenog lista i priloženog računa za kupljeni aparat reklamacija je nevažeća.

SIGURNOSNA UPOZORENJA

NE RABITE APARAT PRIJE NEGO PROČITATE UPUTE ZA UPORABU I UPOZNATE SE S NJEGOVOM UPORABOM.



Upute za uporabu odložite na sigurno mjesto kako bi ih mogli koristiti i za buduće potrebe. Ako aparat prodate ili ustupite drugom vlasniku tada uz aparat priložite i ove upute.

Zbog Vaše sigurnosti, morate se pridržavati naputaka u ovim uputama te na taj način smanjiti rizike od požara, eksplozija, električnog udara, oštećenja imovine, opasnosti po okoliš, ozljedama osoba s ozbiljnim ili tragičnim (smrtnim) posljedicama.

Namjena aparata

Sušilica rublja s **TOPLINSKOM PUMPOM** namijenjena je za sušenje tipične količine rublja u kućanstvu, a koje je prije toga bilo oprano u vodi.

Uporaba aparata je opisana u korisničkom priručniku (uputama za uporabu).

Aparat je namijenjen samo za unutarnju uporabu.

POZORNOST! Proizvođač/distributer ne preuzima nikakvu odgovornost za oštećenja nastala prilikom uporabe neuzemljenog aparata, te u svezi bilo kakvog oštećenja i povreda ako se ne pridržava uputa za uporabu, u slučaju nesavjesne i nepravilne uporabe aparata, samostalnih popravaka i modifikacija te uporabe dijelova koji nisu originalni i odobreni od proizvođača.

Ako do nekog kvara na aparatu dođe, nemojte ga popravljati sami, nego kvar odmah prijavite na jedno od servisnih mjesta, jer u suprotnom može doći do većeg oštećenja aparata.

Ovaj aparat je namijenjen isključivo za uporabu u domaćinstvu i unutar zatvorenih prostora, te nije namijenjen uporabi u profesionalne (komercijalne) svrhe ili namjene koje nadilaze uobičajenu uporabu u domaćinstvu.

Ako se aparat ipak tako upotrebljava, tada proizvođač ne snosi nikakvu odgovornost, a jamstvo ne vrijedi.

Upute o sigurnosti

Električna sigurnost aparata je u skladu s zaštitnom klasom I, te se može priključiti samo na ispravnu i propisnu električnu instalaciju s uzemljenjem.

Priključnica i instalacija mora izdržati struju koja je uvijek veća od one potrebne za aparat (podaci o struji, naponu, i frekvenciji su na natpisnoj pločici aparata).

Aparat obvezatno mora biti uzemljen!

⚠ POZORNOST!

OPASNOST OD ELEKTRIČNOG UDARA!

Električna sigurnost aparata zajamčena je jedino ako je ono ispravno spojeno na ispravnu i propisnu električnu instalaciju s uzemljenjem prema normama i sigurnosnim standardima.

Aparat se priključuje na propisno instaliranu zidnu priključnicu s kontaktom za uzemljenje s vlastitim strujnim krugom i osiguračem. Zidna priključnica mora biti uzemljena, lako pristupačna, ne smije biti izložena toplinskom zračenju i vlazi.

Aparat obvezatno mora biti uzemljen!

Budite uvjereni kako priključni vod nije oštećen, prignječen ili zapetljan tijekom instalacije. Ne zatežite, ne savijajte, ne oštećujte priključni vod.

Ne uključujte aparat u električnu instalaciju ako je priključni vod oštećen.

Oštećeni priključni vod mora biti zamijenjen ispravnim, a smije ga zamijeniti jedino stručna osoba ili serviser. Nestručno priključenje i popravci mogu uzrokovati električni udar i tjelesne ozljede.

Aparat nije dozvoljeno priključiti na električnu instalaciju preko produžnih kablova i/ili vanjskih timera ili sličnih uređaja i daljinskih kontrolera.

Ne dodirujte aparat mokrim rukama dok je uključen u električnu instalaciju te nemojte biti bosí dok se služite aparatom.

Nakon uporabe aparata, obvezatno ga odspojite od električne mreže (povlačeći utikač iz utičnice, ali samo suhim rukama).

Ako se sušilica počinje vrlo naglo zagrijavati na visoku temperaturu, brzo je isključite vađenjem utikača iz utičnice.

⚠ POZORNOST! OPASNOST OD OZLJEDA

Sušilica ne smije biti instalirana iza prepreka (npr vrata, klizna vrata i sl.) jer se time onemogućuje potpuno otvaranje vrata na sušilici.

Aparat nije ugradbeni, niti je predviđen za ugradnju u elemente.

Nemojte deinstalirati i instalirati sušilicu bez uputa ili nadzora.

Ne postavljajte sušilicu rublja na perilicu rublja bez specijalnih setova za montažu (nisu predmet isporuke, moraju se nabaviti posebno) koji su propisani od strane proizvođača i koje mogu ugraditi samo ovlaštene ili kvalificirane osobe.

Nije dozvoljeno naslanjati se na otvorena vrata sušilice. Kondenzirana voda NIJE ZA PIĆE, te je opasna po zdravlje za ljude i životinje.

⚠ POZORNOST! OPASNOST OD OŠTEĆENJA

Ne stavljajte u sušilicu više rublja od preporučenog.

Dozvoljeni kapacitet naveden je u uputama.

Ne koristite sušilicu bez filtera.

Ne sušite rublje prije nego je centrifugirano.

Ne izlažite sušilicu sunčevom zračenju.

Sušilica se ne smije postaviti u prostorijama koje su zaparene, vrlo vlažne (npr. kupaona) ili gdje se pojavljuju zapaljive, eksplozivne ili korozivne pare.

Sušilica se ne smije postavljati na tepih ili podne obloge kako se ne bi zaklonili ili zatvorili otvori za strujanje zraka.

Nije dozvoljeno penjati se, sjediti ili stavljati teške predmete na gornju ploču aparata.

Nije dozvoljeno naslanjati se na vrata aparata.

Sušilica se ne smije pomicati tijekom rada ili održavanja.

Prije čišćenja i održavanja isključite sušilicu te izvadite utikač iz utičnice.

Ne čistite sušilicu mlazom vode ili visokotlačnim parnim aparatom za čišćenje.

⚠ POZORNOST! OPASNOST OD EKSPLOZIJE!

Aparat se ne smije koristiti u prostorijama gdje se pojavljuju zapaljive i/ili eksplozivne pare ili kemikalije.

Aparat se ne smije koristiti ako se industrijske kemikalije koriste za čišćenje rublja.

Ne smije se sušiti rublje koje je čišćeno, namočeno, prano ili trljano zapaljivim ili eksplozivnim sredstvima koja su ostala na rublju (npr. alkohol, trikloretilen, benzin, aceton, vosak, ulje, odmašćivači, petrolej, itd.) jer bi moglo doći do požara ili eksplozije.

Ispušni zrak iz aparata ne smije biti usmjeren u kuhinjsku napu ili na odvod zraka koji koriste kućanski aparati na plin ili druga goriva.

Sušilica rublja sadrži određenu količinu ekološkog, ali vrlo zapaljivog sredstva za hlađenje R290.

Otvoreni plamen ili slično gorivo sredstvo ne smije biti u blizini aparata.

Nije dozvoljeno držati zapaljive tvari u blizini ili na aparatu jer bi se mogle zapaliti.

Nije dozvoljeno sušenje neopranog ili suhog rublja.

Rublje na kojem su mrlje ulja, acetona, alkohola, naftnih derivata, sredstava za skidanje mrlja, terpentina, voska i sredstava za skidanje voska te ostalih sredstava, mora najprije biti oprano vrućom vodom i deterdžentom u perilici rublja, a nakon toga se može staviti u sušilicu rublja.

Rublje koji sadrže lateks i gumene dijelove, kape za kupanje i tuširanje, rublje od vodonepropusnih tkanina, rublje, jastuci ili prevlake s spužvastom gumom, zabranjeno je sušiti u sušilici.

Omekšivači rublja i slični proizvodi moraju se koristiti u skladu s uputama proizvođača.

Rublje natopljeno uljem ili sredstvima za njegu kose, može se spontano zapaliti, pogotovo tijekom izlaganja toplini u sušilici rublja. Rublje postaje toplo, a ulje oksidira, a oksidacija još dodatno povećava toplinu.

Ako se toplina ne odvodi, može doći do zapaljenja.

Zbog toga se takvo rublje mora prvo oprati u vrućoj vodi sa dosta deterdženta. Ipak treba biti oprezan.

Provjerite da u džepovima odjeće, koju stavljate u sušilicu, nema kakvih predmeta (upaljači, mobiteli, igle, novčići, šibice, itd.) jer bi mogli oštetiti sušilicu.

POZOR! Nikada ne zaustavljajte aparat prije kraja programa, a ako se to mora tada rublje treba brzo izvaditi i rasprostrjeti kako bi se ohladilo.

Filtere je potrebno redovito čistiti, a prašina i ostaci se ne smiju taložiti okolo sušilice.

- ⚠ POZORNOST! Sklop izmjenjivača topline se ne smije oštetiti !**
- ⚠ POZORNOST! SIGURNOST DJECE!**
- ⚠ POZORNOST! Po primitku aparata, raspakirajte ga, ambalažni materijal (plastičnu foliju, stiropor, drvo...) uklonite izvan domašaja djece kako se djeca ne bi ozljedila (progutala manje komade ili se ugušila plastičnom folijom).**
- ⚠ OPREZ! Ambalažni materijal (plastična folija, stiropor, drvo...) je opasan za djecu. Djeci nemojte dozvoliti igranje ambalažnim materijalom, kako ne bi progutala manje komade ili se ugušila plastičnom folijom.**
- ⚠ POZORNOST! Ovaj aparat mogu upotrebljavati djeca u dobi od osam godina i starija te osobe sa smanjenim tjelesnim, osjetnim ili duševnim sposobnostima ili pomanjkanjem iskustva i znanja ako dobiju nadzor ili uputu o uporabi aparata na siguran način te razumiju uključene opasnosti.**
- ⚠ POZORNOST! Djeci onemogućite penjanje na aparat ili ulaz u bubanj jer postoji opasnost sa tragičnim posljedicama.**
- ⚠ POZORNOST! Omekšivače rublja, deterdžente i slične proizvode držite izvan dohvata djece.**
- ⚠ POZORNOST! Ne ostavljajte djecu bez stalnog nadzora u blizini aparata.**
- ⚠ POZORNOST! Djeca ne smiju koristiti aparat za igru.**
- ⚠ POZORNOST! Čišćenje i korisničko održavanje ne smiju obavljati djeca bez nadzora. Isto vrijedi i za maloljetne osobe.**

Ovaj aparat nije namijenjen osobama (uključujući djecu) koje imaju smanjene fizičke, osjetne ili mentalne sposobnosti, kao i osobama koje nisu dovoljno iskusne i informirane, osim ako ih se nadgleda ili ako su dobile upute o uporabi aparata od osobe odgovorne za njihovu sigurnost.

Kućni ljubimci moraju biti pod stalnim nadzorom te im se mora onemogućiti penjanje po aparatu, zavlacenje u isti, kao i griženje kablova. Prije uporabe aparata obavite provjeru!


⚠ POZORNOST! OPASNOST OD OPEKLINA!

Površina vrata, stakla, cijev za odvod vode te dijelovi aparata mogu biti jako vrući tijekom rada pa stoga može doći do opekline. Zbog toga djeca i kućni ljubimci moraju biti udaljeni od aparata te pod stalnim nadzorom.

Opasnost od smrzavanja! Ne postavljajte aparat u prostorijama gdje može doći do smrzavanja ili na temperaturama blizu nule. Pri tome može doći do smrzavanja vode u pumpi, crijevima, bubnju, itd. Aparat ne koristite pri temperaturama nižim od 5°C.

POSTAVLJANJE I PRIKLJUČENJE

Opis proizvoda

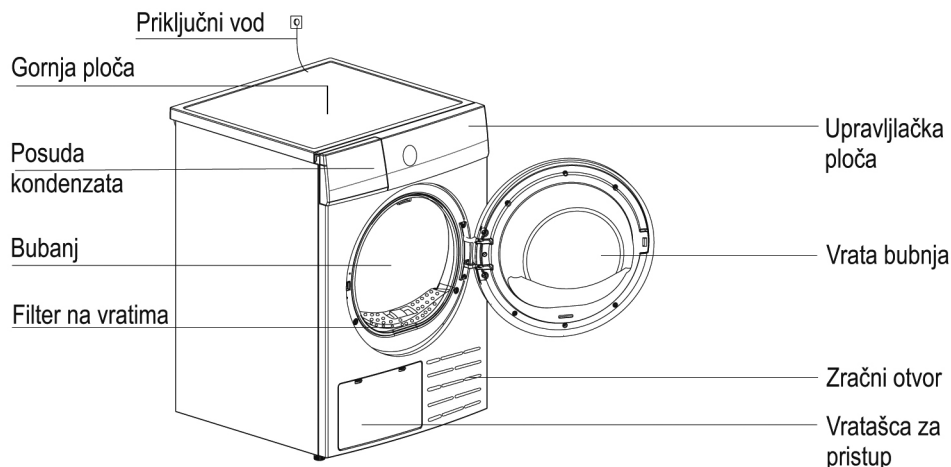


Prikazani crteži su samo informativne naravi i mogu se razlikovati od stvarnog proizvoda. Neki dijelovi mogu biti opcija i ne moraju biti uključeni u proizvod.


Pribor

Ovi dodaci nisu uključeni u sve modele.

Ako Vaš proizvod ima ovaj pribor tada navucite zaštitne rukavice te ga ugradite u skladu s uputama.

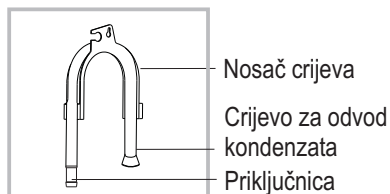

Montaža

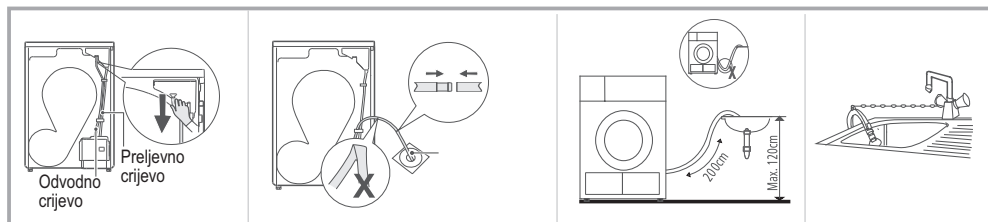

Uklonite crijevo s priključka na kućištu.

Umetnite vanjsko odvodno crijevo na podni priključak za odvod vode. Pazite da cijev nije uklještena ili zapetljana.

Postavite nosač crijeva na umivaonik ili drugi način za odvod vode. Cijev ne stavljati u kantu ili posudu. Pazite da cijev nije uklještena ili zapetljana. Osigurajte cijev od ispadanja.

Transport i mjesto postavljanja

Sušilicu pažljivo prenositi, i ne pridržavati-podizati za osjetljive dijelove (vrata, i sl.), a ako se aparat ne može prenositi uspravno, tada ga se smije nagnuti maksimalno do 30° udesno.


Opasnost od ozljeda i oštećenja na aparatu može se dogoditi prilikom nepravilnog rukovanja aparatom prilikom transporta.

Aparat je težak pa su potrebne najmanje dvije osobe za prenošenje istog, a pritom je potrebno maknuti sve prepreke do mjesta postavljanja.

Uklonite sav ambalažni materijal prije uporabe sušilice. **PRIPAZITE NA DJECU !** Prije postavljanja, provjerite da li ima vidljivih oštećenja, jer se oštećeni aparat ne smije postaviti niti koristiti.


Sušilicu ne postavljati u prostor gdje postoji mogućnost smrzavanja jer može doći do smrzavanja vode, a time i oštećenja pumpe, posude kondenzata, crijeva i ostalih elemenata u sušilici. Rad sušilice na nižim temperaturama (ali iznad točke smrzavanja) može uzrokovati kondenziranje vode unutar aparata. **Pripazite kako aparat ne bi prignječio električni vod.**

1. Preporučuje se da sušilica rublja bude postavljena pored perilice rublja.
2. Ne postavljajte sušilicu rublja na perilicu rublja bez specijalnih setova za montažu (nisu predmet isporuke, moraju se nabaviti posebno) koji su propisani od strane proizvođača i koje mogu ugraditi samo kvalificirane ili ovlaštene osobe.
3. Prostorija treba biti prozračna i bez suviše prašine koja se ne nakuplja. Pri tome vodite računa o razmacima do zidova ili susjednih elemenata zbog sigurnog protoka zraka oko aparata. Prednja i stražnja rešetka ne smije biti pokrivena jer bi se spriječio protok zraka u i iz sušilice. Sušilicu ne postavljati na gust i/ili debeli tepih jer se remeti slobodan protok zraka, a time dolazi do pregrijavanja sušilice.
4. Sušilica se postavlja na čvrstu i ravnu podlogu (pod) jer se time vibracije i buka svode na minimum.
5. Nožice za podešavanje visine i poravnavanje se ne smiju ukloniti iz aparata.

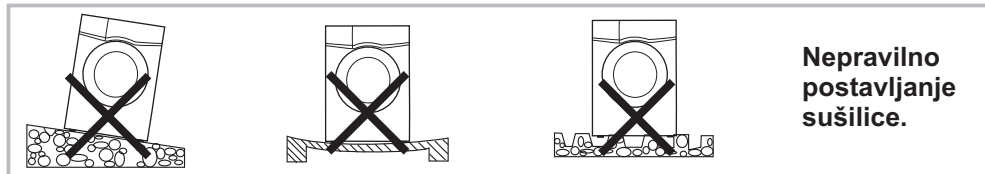

Niveliranje aparata

Nakon postavljanja sušilice na mjesto, potrebno je poravnati isti u vodoravnom i uzdužnom smjeru pomoću nožica za podešavanje. **NE POSTAVLJAJTE NIŠTA ISPOD NOŽICA** (komadiće drveta, pločice is slično). Postavite libelu na gornju ploču aparata, te okretanjem nožica (rukama ili alatom) podesite ravninu. Aparat mora stajati stabilno na tvrdom podu.

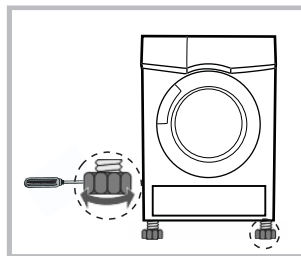

Ne smije doći do buke, vibracija, šumova, pomicanja, jer su to znaci kako aparat nije pravilno postavljen.

Priključenje na električnu energiju

Nakon postavljanja aparata, pričekamo do dva sata kako bi se sistem stabilizirao, a tek nakon toga priključimo aparat na električnu mrežu. Aparat priključujemo na uzemljenu električnu utičnicu neposredno prije uporabe sušilice. Nije dozvoljeno priključiti preko produžnih kablova, timera ili sličnih dodataka.

UPORABA APARATA


Ako sušilicu koristite prvi put

Nakon transporta i postavljanja, pričekati 2 sata. Otvorite vrata, te bubanj očistite suhom krpom. Nakon toga treba poduzeti ove korake :

- stavite čiste krpe u bubanj.
- priključite aparat na električnu mrežu, uključite aparat, odaberite program "Osvježavanje" i pritisnite tipku "Start/Pauza".
- Nakon završetka programa, očistite filter za nečistoće i kondenzator (opisano u poglavlju "Čišćenje i održavanje")
- Tijekom programa, kompresor i pumpa proizvode šumove koji su normalni.

Brze upute

Dalju proceduru možete nastaviti tek nakon pravilnog postavljanja i priključenja sušilice rublja.

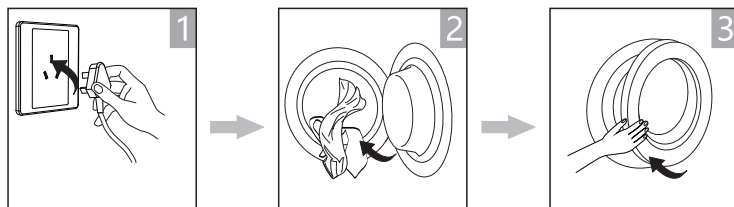

Priključite sušilicu na električnu mrežu.

Umetnite rublje.

Zatvorite vrata.



Uključite aparat



Odaberite program




Odaberite funkciju ili ostaviti osnovno



Pokrenite sušenje

Nakon sušenja

Javlja se zvučni signal i na displayu svijetli "End".

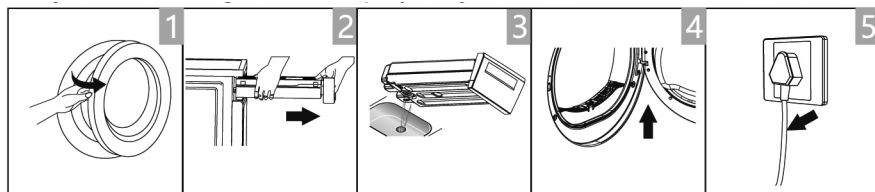

Otvorite vrata i izvadite rublje.

Izvučite posudu.

Izlijte kondenziranu vodu.

Očistite filter.

Odspojite sušilicu sa električne mreže.

Prije svakog sušenja

1. Prije sušenja, rublje je potrebno centrifugirati u perilici rublja. Ovo će smanjiti vrijeme sušenja i smanjiti potrošnju energije.
2. Za jednoliki rezultat sušenja, potrebno je sortirati rublje prema vrsti tkanine i programu sušenja. Posebno osjetljivo rublje poželjno je staviti u posebnu tekstilnu vrećicu namijenjenu za sušenje (kupuje se posebno).
3. Prije sušenja potrebno je zatvoriti patentne zatvarače, zavežite vrpce i trake, zakopčajte dugmad, džepove okrenite van.
4. Uklonite predmete iz džepova.
5. Nije preporučljivo previše sušiti odjeću jer se može zgužvati.
6. Ne sušite odjeću koja sadrži gumene ili slične elastične materijale, kožne predmete, odjeću s metalnim dijelovima koji mogu hrđati, osjetljive odjevne predmete koji bi mogli promijeniti oblik.
7. Vrata se mogu otvoriti samo nakon završetka programa sušenja kako bi se spriječio oparenje kože uzrokovanih vrućom parom ili pregrijavanjem aparata.
8. Očistite filter za nečistoće (nakupine), nakon svake uporabe, kako bi se izbjeglo produženje vremena sušenja a time i potrošnja energije.
9. Ne sušite odjeću nakon kemijskog čišćenja.
10. Odaberite odgovarajući program za odjeću od vunениh materijala kako bi bila svježja i mekana.
11. Zatvorite posteljinu (jastučnice, navlake za poplune i sl.) kako se manje rublje ne bi uvuklo unutra.
12. Ostavite jakne nezakopčane, te oslobodite sve dugačke patent zatvarače, kako bi se tkanina ravnomjerno sušila.
13. Držite područje oko aparata čistim. Ugljena prašina ili brašno mogu uzrokovati eksploziju.

POZORNOST!

- Nikada nemojte preopteretiti sušilicu sa previše odjeće.
- Nije namijenjeno za tkanine s koje kaplje voda jer se može oštetiti sušilica.

Tabela s približnim vrijednostima težine odjevnih predmeta

 Odjeća od više raznih tkanina (pribl. 0,8kg)	 Jakna (pribl. 0,8kg, pamuk)	 Traper (pribl. 0,8kg)	 Ručnici (pribl. 0,9kg, pamuk)
 Plahta (pribl. 0,6kg, pamuk)	 Mandure (pribl. 1,12kg)	 Spavaćice, pidame (pribl. 0,2kg)	 Majica dugih rukava (pribl. 0,3kg, pamuk)
 Majica kratkih rukava (pribl. 0,18kg, pamuk)		 Donje rublje (pribl. 0,07kg, pamuk)	 Čarape (pribl. 0,05kg, mješano predivo)


Obratite pažnju na simbole koji se nalaze na etiketama odjevnih predmeta. Ako se odjevni predmeti mogu sušiti u sušilici rublja tada sadrže ove simbole:

- ☐ Pogodno za sušilicu rublja.
- ☐ Normalni proces sušenja - normalno punjenje (opterećenje) rubljem i pri temperaturi od 80°C.
- ☐ Lagani proces sušenja - potreban je oprez, te se sušilica podešava na lagani proces sušenja s smanjenom termičkom obradom.
- ☒ Nije za sušilicu rublja - rublje nije pogodno za sušenje u sušilici rublja.

Upravljački elementi i njihova uporaba

NAPOMENA!

Crteži i skice samo su informativne naravi i može se razlikovati od stvarnog izgleda na aparatu.

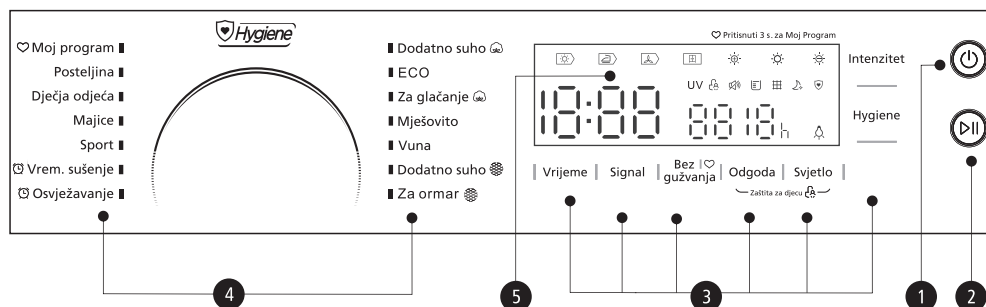

1 Tipka za uključenje/isključenje aparata.

2 Start/Pauza Tipka za pokretanje ili pauziranje ciklusa sušenja.

3 Dodaci Tipka za odabir dodatnih funkcija čiji će se simbol pojaviti na displayu.

4 Programi Držak za odabir raznih programa prema vrsti rublja.

5 Display (pokazivač) Display (pokazivač) pokazuje postavke, funkcije, procijenjeno preostalo vrijeme te statusne poruke na aparatu. Display će svjetliti tijekom ciklusa pranja/sušenja.

Dodaci

Odgoda

Odgoda

Koristi se u slučaju da želimo odgoditi vrijeme sušenja odjeće do 12 sati. Vrijeme odgode prikazano na displayu označava kako će program započeti sa radom nakon toliko sati koliko smo podesili. Nakon pokretanja programa koji smo odgodili, na displayu počinje odbrojavanje vremena unatrag, a početi će treperiti simbol za odgodu.

1. Napunite sušilicu rubljem i zatvorite vrata.
2. Pritisnite tipku za uključenje/isključenje te nakon toga okrenite držak programatora na željeni program. (možete još odabrati opciju "Bez gužvanja" ili "Intenzitet" ako je to potrebno.)
3. Pritisnite tipku "Odgoda".
4. Nastavite pritiskati tipku "Odgoda" kako bi postavili željeno vrijeme odgode.
5. Nakon pritiska na tipku "Start/Pauza" sušilica je u stanju čekanja dok ne istekne podešeno vrijeme odgode, a zatim automatski započinje s radom.
6. Ako se ponovo pritisne tipka "Start/Pauza", funkcija odgode je na čekanju do ponovnog pritiska iste tipke.
7. Ako se želi poništiti funkcija odgode, potrebno je pritisnuti tipku za uključenje/isključenje.

Vrijeme

Vrijeme

Ukoliko je odabran program "Vremensko sušenje", tada pomoću tipke "Vrijeme" možete podesiti vrijeme sušenja u koracima od po 10 minuta.

Intenzitet



Intenzitet

Ova se funkcija upotrebljava za odabir razine osušenosti rublja.

1. Funkcija intenziteta može se uključiti samo prije početka programa.
2. Pritiskajte tipku "Intenzitet" dok ne odaberete željeni nivo sušenja.
3. Programi "Vuna", "Vremensko sušenje", "Pamuk za glačanje" i "Osvježavanje" ne mogu koristiti funkciju "Intenzitet".

Bez gužvanja



Bez gužvanja

Ova funkcija pomaže u sprječavanju većeg gužvanja rublja. Na kraju ciklusa sušenja, vrijeme funkcije "Bez gužvanja" jest 60 minuta (tvornička postavka) ili 30 i 90 minuta (ako se odabere).

Indikator funkcije "Bez gužvanja" će se upaliti ako se odabere ta funkcija. Ako se to želi, proces se može prekinuti, a rublje se može izvaditi tijekom te faze. Programi "Vuna", "Osvježavanje", "Vremensko sušenje" i "Pamuk za glačanje" nemaju mogućnost ove funkcije.

Svjetlo



Svjetlo

Funkcija "Svjetlo" uključuje osvjetljenje bubnja u trajanju od 3 minute nakon pritiska na tipku. U slučaju otvaranja vrata bubnja, osvjetljenje traje 1 minutu .

Signal



Signal

Uključuje ili isključuje zvučni signal. Zvučni signal je prema tvorničkim postavkama uključen.

1. Zvučni signal se javlja ako se pritisne neka od funkcijskih tipki.
2. Zvučni signal se javlja ako je sušilica u radu, a okreće se držak programatora, što je upozorenje na nedozvoljenu radnju.
3. Zvučni signal se javlja kao podsjetnik da je završio program sušenja.

Hygiene



Hygiene

Nakon odabira programa, a ima se potreba, moguće je odabrati funkciju "Hygiene" pritiskom na tipku. Ako se ponovo pritisne tipka "Hygiene", funkcija se poništava.

Ako se odabere funkcija "Hygiene", rublje se sterilizira tijekom sušenja, čime tkanina postaje čišća i mekša. Potreban je oprez kod laganih, tankih i osjetljivih tkanina koje nisu otporne na višu temperaturu, pa stoga treba obratiti pažnju.

Zaštita za djecu



Roditeljsku zaključavanje (Zaštita za djecu)

Aparat posjeduje posebnu funkciju za sigurnost djece, a kojim se onemogućuju nehotični pritisci na tipke koji mogu uzrokovati pogrešno djelovanje aparata.

Dok je aparat u stanju rada (ne u modu mirovanja), istovremeno pritisnite tipke "Odgoda" i "Svjetlo" i držite 3 sekunde.

Na displayu će zasvijetliti simbol roditeljskog zaključavanja. Jedina dostupna tipka biti će "uključenje/isključenje", a ostale ne.

Poništenje ove funkcije moguće je opet u stanju rada, a potrebno je istovremeno pritisnuti tipke "Odgoda" i "Svjetlo" te ih držati 3 sekunde.



Moj Program

Ova funkcija definira i memorira Vaš omiljen program koji često koristite.

1. Odaberite program pomoću drška programatora, kao i dodatne funkcije.
2. Pritisnite i držite tipku "Bez gužvanja" oko 3 sekunde dok ne začujete zvučni signal. Vaš omiljeni program biti će snimljen (memoriran).
3. Kada želite koristiti "Moj program", okrenite držak programatora na "Moj Program" i startajte aparat.
4. Ako želite promijeniti "Moj Program" ponovite postupak 1 i 2.

Display

NAPOMENA!

Crteži i skice samo su informativne naravi i može se razlikovati od stvarnog izgleda na aparatu. Neki detalji mogu ili ne moraju biti uključeni, iako su navedeni. Sve ovisi o modelu i opremljenosti aparata.



Zaštita za djecu



Preostalo vrijeme/poruka greške



Tijek programa (sušenje, za glačanje, hlađenje, za ormar)



Upozorenje za čišćenje filtera



Upozorenje za pražnjenje posude za kondenzat



Intenzitet sušenja (dodatno suho, za ormar, manje suho)



Svjetlo



Signal



Hygiene



Bez gužvanja



Pamuk



Vuna



Sintetika

Programi

Prije početka sušenja

1. Priključiti aparat na električnu utičnicu
2. Ubaciti i rasprostriti rublje u bubanj.
3. Zatvoriti vrata, pazeći kako se ne bi vratima priklještila odjeća.
4. Uključiti aparat

Pokretanje ciklusa sušenja

1. Pritisnite tipku za uključenje/isključenje ,a nakon što display zasvjetli, okrećite držak programatora kako bi odabrali željeni program.
2. Odaberite funkciju "Vrijeme", "Signal", "Bez gužvanja", "Odgoda", "Svjetlo", "Hygiene" ili "Intenzitet" kao dodatnu opciju.
3. Pritisnuti tipku "Start/Pauza".
4. Pritisnite tipku za uključenje/isključenje nakon što se program okonča.

Početak i praćenje programa

Kada se program pokrene, bubanj sušilice će rotirati, indikatori će početi svjetliti kako program teče, a display će pokazivati vrijeme koje je preostalo .

Kraj programa

Bubanj sušilice će se zaustaviti, javit će se zvučni signal, a display će prikazati "0:00", a odgovarajući simbol će svjetliti.

Program će započeti funkciju "Bez gužvanja" ako se rublje ne izvadi.

Nakon što se rublje izvadi, pritisnuti tipku za uključenje/isključenje kako bi se aparat kompletno isključio (display će se ugasi), te izvadite utikač iz utičnice.

Ako se pojavi problem tijekom sušenja, što se manifestira prestankom rada i prijavom greške na displayu, potrebno je pogledati poglavlje o problemima i njihovim mogućim rješenjima.

POZORNOST !

OVISNO O MODELU !

U slučaju nestanka električne energije tijekom rada aparata, zadnje postavke programa su memorirane, pa nakon povratka električne energije, program nastavlja s radom. Kod nekih modela je potrebno pritisnuti tipku za uključenje kako bi program nastavio s radom, a kod nekih se sve mora ponoviti od početka.

Tablica programa

SR8MBKINV / SR8MDSKINV

Program		Težina (max.)	Primjena	Odgoda	Vrijeme
Pamuk	Dodatno suho	8.0kg	Sušenje jednoslojnog ili višeslojnog pamučnog rublja kako bi se kompletno osušilo za odlaganje u ormar.	DA	NE
	Za glačanje		Sušenje jednoslojnog pamučnog rublja kako bi ostalo vlažno za glačanje.		
	ECO	8.0kg	Sušenje jednoslojnog ili višeslojnog pamučnog rublja kako bi se kompletno osušilo za trenutno nošenje.		
Mješovito		3.5kg	Sušenje mješovitih tkanina od pamuka i sintetike.	DA	NE
Sintetika	Dodatno suho	3.5kg	Sušenje debljeg ili višeslojnog sintetičkog rublja kako bi se kompletno osušilo.	DA	NE
	Za ormar		Sušenje tanjeg sintetičkog rublja koje se neće glačati, kao što su majice koje se lako održavaju, dječja odjeća ili čarape.		
Vuna		1.0kg	Nježno sušenje za vunenu odjeću za strojno pranje. Konačni sadržaj vlage ovisi o količini punjenja i sadržaju vlage nakon centrifugiranja.	DA	NE
Moj program		---	Korisnički definiran i spremljen program.	DA	---
Posteljina		4.0kg	Sušenje postelnog rublja, navlaka ili ostale veće posteljine.	DA	NE
Dječja odjeća		1.0kg	Sušenje male količine odjeće za bebe.		
Majice		1.0kg	Sušenje košulja i bluza uz funkciju bez gužvanja za što lakše glačanje. Rublje rasprostrate u sušilici. Nakon sušenja, rublje objesite na vješalice.		
Sport		3.0kg	Sušenje sportskog rublja, tanjih tkanina, tkanina od poliestera, koje se neće glačati.	DA	NE
Vrijeme	Vremensko sušenje	3.0kg	Sušenje pojedinačnih odjevnih predmeta ili kompletni proces sušenja višeslojnih tkanina koje pak imaju različite načine sušenja (npr. jakne, jastuci ili voluminozno rublje. Trajanje od 10 do max. 150 minuta u koracima od 10 minuta.	DA	DA
	Osvježavanje	1.0kg	Osvježavanje rublja koje je stajalo u zatvorenom prostoru ili otklanjanje mirisa, u trajanju od 20 do max. 220 minuta, u koracima od 10 minuta.		

NAPOMENA!

1. Program ECO je u skladu s EU regulativom 2533/2023 i 2534/2023 za eco dizajn i energetska označavanje, mjereno u skladu s EN 61121.
2. Ovaj je ECO program pogodan za sušenje normalno vlažnog pamučnog rublja te je najučinkovitiji program u smislu potrošnje energije za pamučno rublje.

Potrošnja energije

Model	Program	Kapacitet	Ukupna preostala vlaga	Vrijeme sušenja (h:min)	Potrošnja energije	Brzina centrifuge
SR8MBKINV SR8MDSKINV	ECO	8.0kg	0%	3:30	1.74kWh	1000 o/min
		4.0kg	0%	2:05	1.01kWh	1000 o/min
	Pamuk dodatno suho	8.0kg	-3%	3:50	1.95kWh	1000 o/min
		4.0kg	-3%	2:25	1.20kWh	1000 o/min
	Pamuk za glačanje	8.0kg	12%	3:00	1.50kWh	1000 o/min
		4.0kg	12%	1:35	0.80kWh	1000 o/min
	Sintetika dodatno suho	3.5kg	0%	1:10	0.65kWh	800 o/min
	Sintetika za ormar	3.5kg	2%	1:00	0.55kWh	800 o/min
	Vuna	1.0kg	/	0:25	0.30kWh	/

Emisija buke koja se prenosi zrakom tijekom ECO programa te pri punom opterećenju iznosi 65dB. Brzina centrifuge se odnosi na perilicu rublja u kojoj se pere rublje, prije sušenja.

NAPOMENE !

Debele ili višeslojne tkanine , npr. posteljina, traper, jakne i sl. nisu jednostavne za sušenje, pa se stoga preporučuje program "Pamuk Dodatno suho" ili funkciju "Intenzivno" ako je dostupna (ovisno o modelu).

Nejednoliki materijal, debeli i višeslojni odjevni predmeti, teže se suše pa je zato bolje odabrati program s odgovarajućim vremenom sušenja kako bi se neki mokri dijelovi odjeće osušili.

Punjenje sušilice rublja na maksimalni kapacitet, ali za odgovarajući program, pridonjeti će uštedom energije.

Podaci u tablici su mjereni u skladu s regulativom EN61121.

Podaci u tablicama samo su informativne naravi. Stvarni parametri mogu odstupati od parametara prikazanih u tablicama. Vrijednosti trajanja sušenja, potrošnje energije mogu se razlikovati u ovisnosti od opterećenja i vrste rublja, odabranih dodatnih funkcija i temperature okoliša. Stvarni parametri ovise o tome kako će se aparat koristiti. Tablicu uzeti samo kao približni orijentir.

ODRŽAVANJE APARATA


Čišćenje i održavanje

⚠ Pozornost!

Prije početka održavanja, potrebno je isključiti aparat iz električne mreže.

Pražnjenje posude za kondenzat

1. Primite i izvučite posudu za kondenzat s obje ruke.
2. Nakrenite posudu i ispraznite kondenziranu vodu.
3. Umetnite posudu natrag u za to predviđeno mjesto.

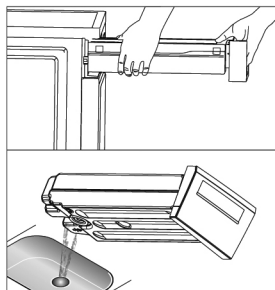

⚠ POZORNOST!

Posudu za kondenzat praznite nakon svake uprabe sušilice. Ako se program pauzira i pri tom treperi simbol "☐" to je znak kako se posuda za kondenzat napunila tijekom procesa sušenja. Ispraznite posudu kako je gore opisano, te nastavite s programom ponovnim pritiskom na tipku "Start/Pauza".

Kondenzirana voda NIJE ZA PIĆE !

NEMOJTE koristiti sušilicu bez posude za kondenzat !

Čišćenje filtera na vratima


Aparat ima primarni filter na vratima.

Filter treba čistiti nakon svakog ciklusa kako bi se izbjegla povećana potrošnja energije i vremena sušenja.

Kako bi dvoslojni filter bio pravilno umetnut, strelice na oba kraja moraju biti poravnate, a srednji utor i rebro također moraju biti poravnati.

Nakon uporabe ostavite sušilicu neka se ohladi te je isključite iz električne mreže.

1. Otvorite filter sušilice.
2. Izvadite filter vrata.
3. Otvorite filter, obrišite nečistoće (vlakna, konci, mucice, nakupine i sl.) koje su se nakupile. Moguće je koristiti usisavač ili čistiti ručno.
4. Nečistoće baciti u smeće (NE PRATI I ISPUŠTATI U ODVOD VODE). Vratite filter vrata na svoje mjesto, pazeći na pravilnu orijentaciju.

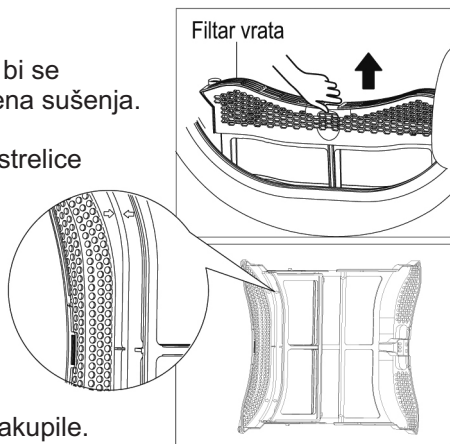

Čišćenje izmjenjivača topline


NAPOMENA !

Ne dirajte izmjenjivač topline rukama jer se možete porezati na rashladne limove.

Ostavite sušilicu neka se ohladi te je isključite iz električne mreže.

Prema potrebi, otprilike svakih 6 mjeseci, odstranite nečistoće iz izmjenjivača topline pomoću usisavača na koji je stavljen nastavak s četkicom.

Pažljivo i bez pritiska očistite izmjenjivač topline, jer nepažljivim i grubim čišćenjem mogu se savinuti i oštetiti elementi na izmjenjivaču.

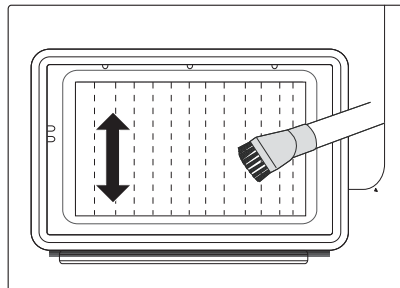

Uklanjanje stranih objekata

Ostavite sušilicu neka se ohladi te je isključite iz električne mreže.

U slučaju upadanja stranih objekata unutar komore filtera, potrebno je ukloniti filter, otvoriti komoru izmjenjivača topline, te ukloniti objekt, pazeći da se ne dodiruje izmjenjivač topline kako bi se izbjegle povrede.

Čišćenje aparata

Ostavite sušilicu neka se ohladi te je isključite iz električne mreže.

Nositi zaštitne rukavice tijekom čišćenja.


Površine se mogu čistiti navlaženom krpom u čistoj vodi. Uporaba kemijskih ili sličnih sredstava (alkohol, kemijska sredstva, otapala, kiseline, ili slično) nije dozvoljeno u svrhu čišćenja. Nije dozvoljena uporaba abrazivnih sredstava, oštih i šiljatih predmeta.

Pripremiti krpu navlaženu u čistoj vodi, te očistiti vrata, pogotovo unutrašnju stranu stakla.

Očistiti brtve na vratima, te senzor za vlagu unutar bubnja.

Izvaditi filter, te očistiti brtve i otvore za zrak.

Nakon čišćenja potrebno je sve **DOBRO OSUŠITI** s suhom mekanom krpom.

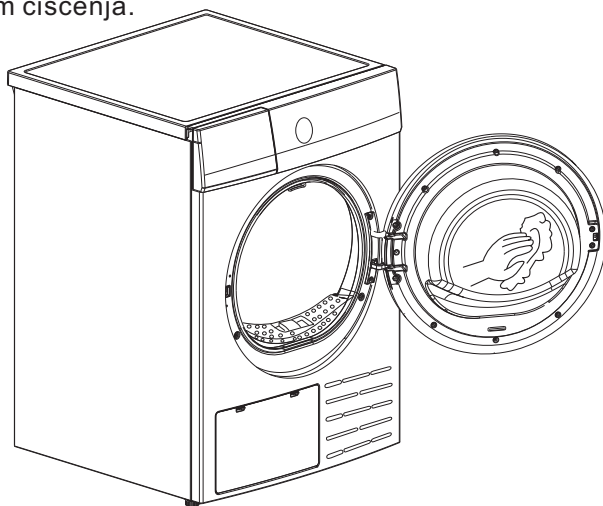

Problemi te njihovo moguće uklanjanje

POZORNOST!

Samo stručno osposobljeno servisno osoblje, iz ovlaštenog servisa, smije obavljati popravke.



Kolebanja u električnoj mreži:

Ponekad se događaju velike promjene napona u mreži ili čak vrlo brzi i kratki prekidi napona u mreži (dijelić sekunde ili do sekundu-dvije). Ta pojava može uzrokovati prekid rada elektronike u aparatu. U tom slučaju isključite aparat iz mreže, pričekajte nekoliko minuta, uključite s aparatom te ponovo pokrenite program. Ako to rješenje ne pomogne tada se obratite ovlaštenom sevisu.

Poruka greške

Poruka greške na displayu	Razlog greške	Rješenje
"E32"	Greška u senzoru za vlagu	Odspojiti aparat s električne mreže, te kontaktirati ovlašteni servis
"E33"	Greška u senzoru za temperaturu	
"E82"	Greška u komunikaciji s elektronskim sklopovima	
	Kvar pumpe za vodu ili kvar senzora za nivo vode	
	Posuda za kondenzat je puna	Isprazniti posudu
Ako se na displayu pojave ostale poruke, a sušilica ne radi, tada je potrebno odspojiti aparat s električne mreže, te kontaktirati ovlašteni servis.		

Ukoliko Vaš aparat ne radi ispravno, uzrok bi mogla biti neka sitnica.

Kako biste uštedijeli vrijeme i novac prije pozivanja servisera, provjerite sljedeće:

Problem	Moguće rješenje
Display ne svjetli	Provjerite da li ima električne energije. Provjerite da li je sušilica uključena na električnu mrežu ili da li je pregorio osigurač. Provjerite da li ste odabrali program. Pritisnite tipku za "uključenje/isključenje"
Simbol "" svjetli	Ispraznite posudu za kondenzat. Ako posuda za kondenzat nije puna, pritisnite tipku za "uključenje/isključenje" i ponovite program. Ako simbol i dalje svjetli tada pozovite ovlašteni servis.
Simbol "" svjetli	Očistite filter za nečistoće.

Problem	Moguće rješenje
Sušilica se ne pokreće	Priključiti sušilicu na električnu mrežu. Uključiti sušilicu na tipku "uključenje/isključenje". Provjerite da li su vrata zatvorena. Provjerite da li je odabran program. Pritisnuti tipka "Start/Pauza".
Nije postignut dovoljan stupanj osušenosti rublja ili je vrijeme sušenja predugo	Očistite filter za nečistoće i izmjenjivač topline. Ispraznite posudu za kondenzat. Provjerite crijevo za odvod kondenzata (ovisno o modelu može biti ugrađen ili dodatno montiran). Mjesto gdje je postavljena sušilica nije prozračno ili je pretoplo ili prehladno. Držite otvore za ulaz zraka čistim. Koristite intenzivnije programe za sušenje ili vremenski duže programe. Rublje prije sušenja nije dovoljno centrifugirano u perilici. Prevelika količina rublja.
Razni zvukovi dopiru iz sušilice	Kompresor izmjenjivača topline je u radu. Takvi zvukovi su normalna pojava.
Sušilica se isključi na kraju programa.	Sušilica se automatski isključi kako bi se uštedila energija. To je normalna pojava.


Ukoliko predložena rješenja ne uklone problem tada isključite sušilicu na tipku "uključenje/isključenje", izvadite utikač iz utičnice te pozovite ovlašteni servis.

Informacije o prijevozu

Odspojiti aparat s električne mreže. Isprazniti posudu za kondenzat (ako već nije). Ako je moguće, sačuvajte originalnu ambalažu i proizvod uvijek prevozite u originalnoj ambalaži. Pridržavajte se znakova i uputa za prijevoz na kutiji. Ako nemate originalnu kutiju tada poduzmite potrebne mjere za zaštitu vanjskih površina (staklenih, plastičnih i obojenih površina) aparata od udaraca. Aparat je težak pa ga je potrebno pažljivo prenositi i podizati. Nikada ga ne podizati držeći za ručku ili vrata ili druge dijelove. Nakon transporta, aparat se mora ponovno postaviti i priključiti u skladu s uputama.

Tehnički podaci

Model	SR8MBKINV SR8MDSKINV
Dimenzije (DxŠxV)	600x595x845mm
Temperatura okoline	+2°C ~ +35°C
Ukupna snaga	800W
Nazivni napon	220-240V~
Frekvencija	50Hz
Težina proizvoda	41kg
Nazivni kapacitet	8.0kg
Rashladno sredstvo	R290
Količina rashladnog sredstva	120g
Ekvivalent CO2 u tonama	0.00t
GWP vrijednost	3

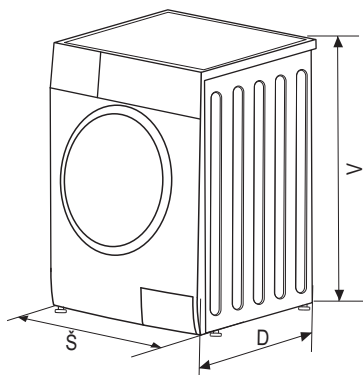

POZORNOST!

Nazivni kapacitet je maksimalni kapacitet za jedno sušenje. Vodite računa kako težina suhe odjeće, koja se osušila, ne bi premašila nazivni kapacitet.

Sušilicu ne postavljati u prostor gdje postoji mogućnost smrzavanja jer može doći do smrzavanja vode, a time i oštećenja pumpe, posude kondenzata, crijeva i ostalih elemenata u sušilici.

Rad sušilice na nižim amijentalnim temperaturama (ali iznad točke smrzavanja) može uzrokovati kondenziranje vode unutar aparata, ali i nepravilan rad aparata.

INFORMACIJSKI LIST - SUŠILICA RUBLJA	
Robna marka	KONČAR
Model	SR8MBKINV SR8MDSKINV
Nazivni kapacitet	8.0kg
Vrsta sušilice	Kondenzacijska
Energetski razred	D
Automatski ili ne	Automatski
Procjenjena potrošnja energije ECO programa pri punom i djelomičnom punjenju (Etc)	1.19kWh
Standardna potrošnja energije ECO programa (SEc)	1.70kWh
Potrošnja energije ECO programa pri punom punjenju (Edry)	1.74kWh
Potrošnja energije ECO programa pri djelomičnom punjenju (Edry,1/2)	1.01kWh
Indeks energetske učinkovitosti (EEI)	70.0
Procjenjeno trajanje ECO programa (Tt)	145min
Trajanje ECO programa pri punom punjenju (Tdry)	210min
Trajanje ECO programa pri djelomičnom punjenju (Tdry1/2)	125min
Učinkovitost kondenzacije (A (najučinkovitije) do D (najmanje učinkovito))	D
Prosječna učinkovitost kondenzacije ECO programa pri punom punjenju (Cdry)	81%
Prosječna učinkovitost kondenzacije ECO programa pri djelomičnom punjenju (Cdry1/2)	81%
Procjenjena učinkovitost kondenzacije ECO programa pri punom i djelomičnom punjenju	81%
Razina buke koja se prenosi zrakom tijekom ECO programa	65dB
Potrošnja energije u stanju isključenosti (Po)	0.50W
Potrošnja energije u stanju odgode (Pds)	4.00W
Da li stanje mirovanja podrazumijeva prikaz informacija na zaslonu (displayu) ?	Ne
Potrošnja energije u stanju mirovanja (Psm)	-
Potrošnja energije u stanju mirovanja u slučaju umreženog stanja mirovanja (Pnsm)	-

NAPOMENA:

Mjereno u skladu s direktivom EN 61121 i EU direktivom 2023/2533, 2023/2534, energetska učinkovitost se označava od A (najveća učinkovitost) do G (najmanja učinkovitost).

Tumble Dryer

OWNER'S MANUAL



Read all instructions and explanations before use.

Follow the instructions carefully .

Keep the operation instructions handy for later use .

If the appliance is sold or passed on then ensure that the new owner always receives these operation instructions.

CONTENTS

SAFETY INSTRUCTIONS

■ Safety Instructions	2
-----------------------------	---

INSTALLATION

■ Product Description	9
■ Installation	9

OPERATION

■ Quick Start	12
■ Before Each Drying	13
■ Control Panel	15
■ Option.....	16
■ Display.....	18
■ Programmes.....	19
■ Drying Programmes Table	20
■ Consumption Data.....	21

MAINTENANCE

■ Cleaning and Care	22
■ Trouble Shooting	25
■ Technical Specifications	27
■ Product Information Sheet	28



DANGER

This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas.

SAFETY INSTRUCTIONS

■ Safety Instructions



CAUTION: RISK OF FIRE !

Warning!

To prevent any damages to your and others' life or property, you have to follow the safety notes.

Intended use

- This heat pump dryer is intended for drying typical amounts of household laundry, which have been washed with water. It has been designed solely for private use and is not suitable for commercial or shared use (i.e. by several families in an apartment building).
- Use this appliance only as described in this user manual.
- This appliance is for indoor use only.
- Any other use is deemed improper and may result in damage to property or even personal injury.
- The manufacturer accepts no liability for damage caused by improper use.

Safety Instructions

- The appliance corresponds to protection class I and may only be connected to a plug with a protective conductor that has been installed properly. When connecting the appliance to the mains, make sure that the mains voltage is correct. You can find more information about this on the rating plate.

SAFETY INSTRUCTIONS

Warning!

Electric shock hazard

- Before connecting the tumble dryer, ensure that the connection parameter on the rating plate (fuse rating, voltage and frequency) match the mains electricity supply. If in any doubt, consult a qualified electrician.
- The electrical safety of this tumble dryer can only be guaranteed when correctly earthed. It is essential that this standard safety requirement is met. If in any doubt, please have the household wiring system tested by a qualified electrician. The manufacturer cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).
- Do not pull the power cord forcefully. Please grasp the mains plug instead
- Do not plug/draw the mains plug with wet hands.
- Do not bend, clamp or damage the power cord and the power plug.
- If the power cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

SAFETY INSTRUCTIONS

- Warning: The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- Do not connect the appliance to the mains electricity supply by an extension lead, multi-socket adapter or similar.
- The accessibility of the plug must always be ensured, in order to disconnect the tumble dryer from the mains.
- If the appliance appear high temperature abnormally, please draw the mail plug immediately.

Injury danger

- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.
- Do not disassemble or install the dryer without any instruction or supervision.
- Do not stack this dryer on washing machine without stacking kits. (If you want to stack this dryer on a washing machine, please purchase the independent parts. Installation shall be done by the manufacturer, its service agent or similarly qualified persons to avoid any hazards.)
- Do not lean on the opened door of the dryer.
- Condensed water is not drinking water. It can cause health problems in both people and animals if consumed.

Damage danger

- Do not put more load than rated in this user manual. See the related chapter in the user manual.

SAFETY INSTRUCTIONS

- Do not operate the dryer without the door filter.
- Do not dry the clothes before being spun.
- Do not expose the dryer directly under the sun.
- Do not install the dryer in humid and drenching environment.
- While cleaning and maintenance, please do remember to pull out the power plug and do not directly spray the dryer with water.
- The appliance should not be overturned during normal use or maintenance.



CAUTION: RISK OF FIRE !

Explosion & Fire danger

- Please do not dry the clothes with any flammable substances such as kerosene or alcohol. Otherwise, there may be explosion.
- The appliance contains an environmentally friendly but flammable R290 refrigerant. Keep away from open flame and other sources of ignition.
- The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.

SAFETY INSTRUCTIONS

- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.
- Remove all objects from pockets such as lighters and matches.
- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent. This will reduce, but not eliminate, the hazard.
- **WARNING:** Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- Openings must not be obstructed.
- The lint trap has to be cleaned frequently.
- Lint must not be allowed to accumulate around the tumble dryer.
- **WARNING:** In the appliance enclosure or in the built-in structure, keep ventilation openings clear of obstruction.
- **WARNING:** Do not damage the refrigerant circuit.

SAFETY INSTRUCTIONS

Safety with children

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision.
- Children should be supervised to ensure that they do not play with the appliance.
- Children of less than 3 years should be kept away unless continuously supervised.
- Always close the door after use. In this way you will avoid the danger of:
 1. Children climbing onto or into the dryer or hiding things in it.
 2. Pets or other small animals climbing into it.

SAFETY INSTRUCTIONS

Correct Disposal of this product:



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Dispose of the appliance in accordance with local requirements for the disposal of Waste Electrical and Electronic Equipment.


The appliance contains flammable gas(R290).
Contact your municipal authority for information on how to discard the appliance correctly.

Disposal of packaging material

- The packaging is designed to protect the appliance from damage during transportation. The packaging materials are environmentally friendly and should be recycled. Recycling the packaging can reduce the use of raw materials in the manufacturing process and the amount of waste in landfill sites.

INSTALLATION

■ Product Description

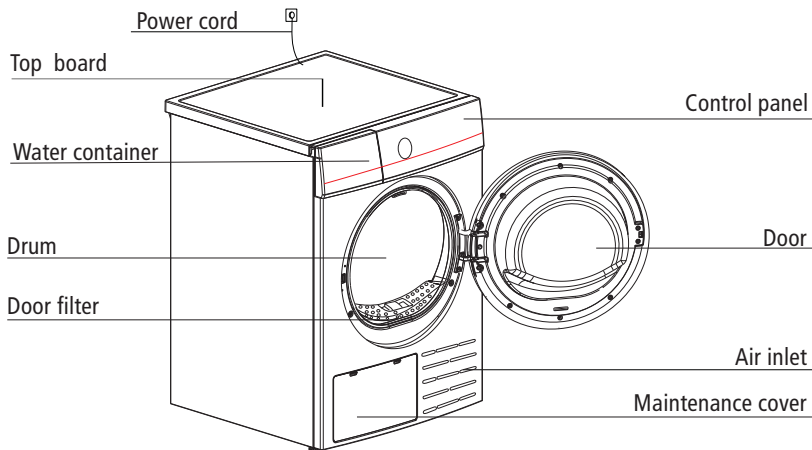


Note: The actual model you purchased might differ. Please see the product you purchased in kind prevail.


Accessories

The following parts are optional for specific models.

If your dryer has following parts, please wear gloves to install them as per the instruction below .

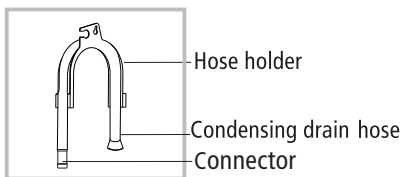

■ Installation

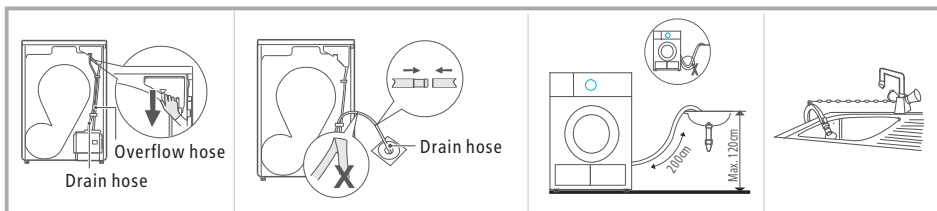

Pull out the upper drain hose

Put the external drain hose into the floor drain (be careful not to kink the external drain hose)

Put the hose holder in the washing basin or any other sink.

INSTALLATION

Transport

Move cautiously. Do not grasp any salient parts of machine. The machine door cannot be used as the handle for transport. If the dryer can't be transported erectly, the dryer can be tilted to right less than 30°.

Risk of injury and damage!

Improper handling of the appliance may result in injury.

- The appliance is very heavy. Never transport or carry the appliance alone; always with the assistance of another person.
- Remove all obstacles on the transport route and from the installation location, e.g. open doors and clear away objects lying on the floor.
- Do not use the open door as a handhold.
- Remove all package material before using the appliance.
- Before setting up the tumble dryer, check it for any externally visible damage. Do not install or use a damaged tumble dryer.
- Do not install the tumble dryer in a room where there is a risk of frost occurring. At temperatures around freezing point the tumble dryer may not be able to operate properly. There is a risk of damage if the condensed water is allowed to freeze in the pump and hoses.


Installation Position

Warning!

- Children can become entangled in the packaging film or swallow small parts and suffocate. Do not allow children to play with the packaging.
 - The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.
 - Do not restrict the floor clearance through deep pile carpets, strips of wood or similar. This might cause heat built-up which would interfere with the operation of the appliance.
1. It is recommended that, for your convenience, the machine is positioned close to your washing machine.
 2. Do not stack this dryer on washing machine without stacking kits. (If you want to stack this dryer on a washing machine, please purchase the independent parts. Installation shall be done by the manufacturer, its service agent or similarly qualified persons to avoid any hazards.)
 3. The tumble dryer must be installed in a clean place, where dirt does not accumulate. Air must be able to circulate freely around the appliance. Do not obstruct the front air inlet or the air intake grilles at the back of the machine.


INSTALLATION

4. To keep vibration and noise within minimum level when the dryer is in use, it must be placed on a firm and level surface.
5. The feet must never be removed.

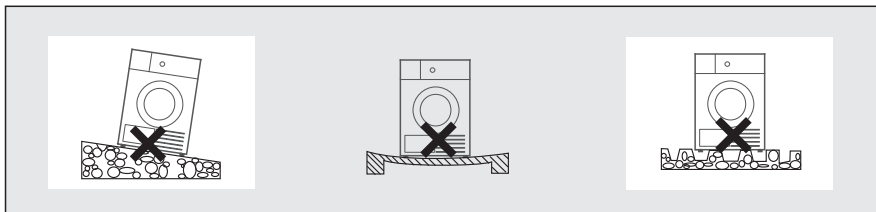

Level Adjusting

Once in its permanent operating position, check that the dryer is absolutely level with the aid of a spirit level. If it is not, adjust the feet by hand or using a tool.

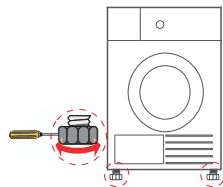

Power Supply Connection

1. Make sure that the voltage of the power supply is the same as the electric specification.
2. Do not connect the dryer with the power connection board, a universal plug or socket, do not use multi-plug adapters and extension cables.

Note!

- Leave it to stand for 2 hours after transporting. Before first use, please use the soft fabric to clean the inside drum..
 1. Put some clean rags into the drum.
 2. Plug the power, press **【On/Off】**.
 3. Select the **【Refresh】** Programme, press **【Start/Pause】** button.
 4. After finishing this programme, please follow the "cleaning and care" (refer to page 22) to clean the door filter.
- During drying, the compressor and the water will generate some noise which is entirely normal.


OPERATION

■ Quick Start

Note!

Before using, make sure the tumble dryer is installed correctly.

Before Drying

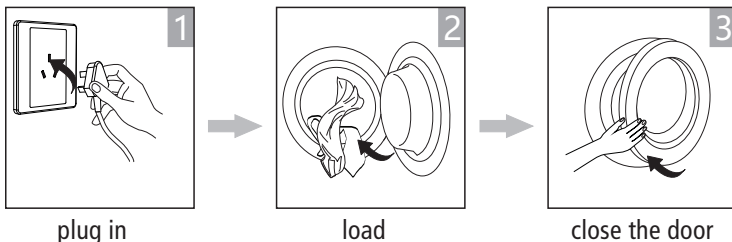


Drying



After Drying

Buzzer beep and "End" on display.

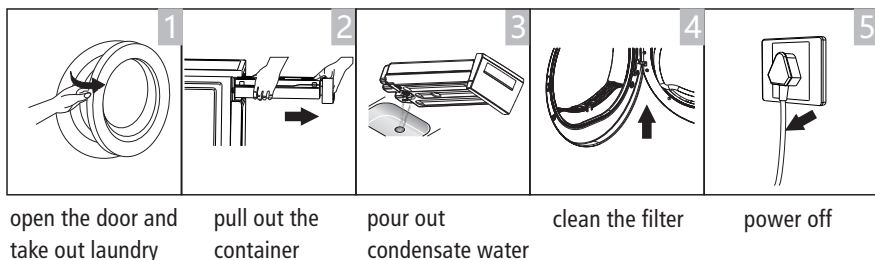

Note!

- If the socket with a switch is used, please press the switch to turn off the power directly.

OPERATION

■ Before Each Drying

1. Before drying, thoroughly spin the laundry in washing machine. High spin speed shortens the drying time and saves energy.
2. For uniform drying result, sort the laundry according to fabric type and select the appropriate drying programme.
3. Before drying, please close zips, hooks and eyelets, button, tie fabric belts, etc.
4. Remove all objects from pockets such as lighters and matches.
5. Sew in or remove underwiring from bras.
6. Close duvet covers and pillow cases to prevent small items from being rolled up inside them.
7. Leave jackets open and undo any long zips so that textiles dry evenly.
8. Do not over dry the clothes, because over dried clothes can easily get creases.
9. Do not dry the articles containing rubber or similar elastic materials.
10. Keep the area around the tumble dryer clean. Coal dust or flour may cause an explosion.
11. The door shall be opened only after the programme of the tumble dryer is finished to avoid being scalded by hot steam or over heated drying machine.
12. Clean the lint filter and empty water container after each use to avoid extension of drying time and increase of energy consumption.
13. Do not dry clothes after dry-clean process.

OPERATION

The reference weight of dry clothes (weight per item)

 Sweater (mixed 800g)	 Jacket (cotton 800g)	 Jeans (800g)	 Bath Towel (cotton 900g)
 Single bedsheet (cotton 600g)	 Work clothes (1120g)	 Pyjamas (200g)	 Shirt (cotton 300g)
 T-Shirt (cotton 180g)	 Underwear (cotton 70g)	 Socks (mixed-weave 50g)	

Note!

- Do not put more load than rated.
- Do not dry dripping wet laundry. The dryer might get damaged

Only dry laundry suitable for tumble drying. Regard the laundry care labels:



Suitable for tumble drying



Normal drying process: Drying in the tumbler is possible under normal load and temperature 80°C.




Mild drying process: Caution is appropriate when tumble drying. Select mild process with reduced thermal action.



Do not tumble dry: Articles unsuitable for drying in the tumbler.

OPERATION

■ Control Panel

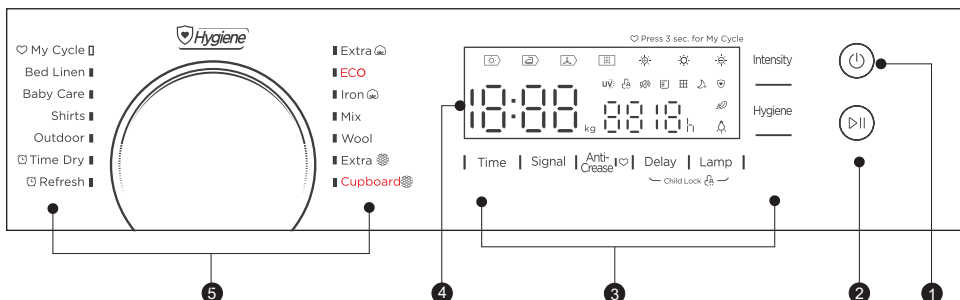

1 On/Off

Product is switched on or off.

2 Start/Pause

Press the button to start or pause the drying cycle.

3 Option

These buttons are used for setting additional functions.

4 Display

The display shows the setting, estimated program time remaining and status messages of your dryer.

5 Programmes

Different drying cycles can be selected according to the users need and the type of laundry to be dried.

OPERATION

■ Option

Delay

Delay

This function is used for delaying the start of the drying programme up to 12 hours. When the delayed programme starts, the time starts to countdown on the display and the delay icon blinks.

1. Load your laundry and make sure the machine door is closed.
 2. Press the **【On/Off】** button, then use the programme selector knob to select the desired programme.
 3. You can additionally select the **【Anti-Crease】** or **【Intensity】** functions according to your need.
 4. Press the **【Delay】** button.
 5. Repeatedly press the **【Delay】** button to select the desired delay time.
 6. After the **【Start/Pause】** button is pressed, the Dryer is at the running condition. The drying procedure will be automatically performed when the delay time is over.
 7. If you press the **【Start/Pause】** button again, the delay function will be paused.
 8. If you want to cancel the "Delay" function, please press the **【On/Off】** button.
-

Time

Time

When the **【Time】** programme is selected, the **【Time】** button can be used to adjust the drying time in 10 min. steps.

Intensity



Intensity

You can adjust the dryness level of the laundry by pressing the **【Intensity】** button.

1. The intensity function can be activated only before the programme starts.
 2. Press the **【Intensity】** button repeatedly to increase the drying grade.
 3. Except the **【Cotton Iron】**, **【Wool】**, **【Time Dry】** and **【Refresh】** programme, all the other programmes can be adjusted with the **【Intensity】** function.
-

Anti-Crease



Anti-Crease

At the end of the drying cycle, the anti-crease time is 60 minutes (default), 30 minutes or 90 minutes (selected).

This function prevents the laundry from creases. The laundry can be removed during the anti-crease phase.

Except **【Wool】**, **【Refresh】**, **【Time Dry】** and **【Cotton Iron】** all the other programmes have this function.

OPERATION



Lamp

The drum light will be on for 3 minutes when the button is pressed or 1 minute when the door is open.



Signal

Set the buzzer on or off. In default condition, the buzzer is on.

When the buzzer is on:

1. The dryer will affirm pressed function button by a sound.
 2. If the programme knob is rotated during the dryer is running, the buzzer will remind the user that this is an invalid operation.
 3. When the drying programme is done, the buzzer will beep.
-



Hygiene

After selecting the program, you can choose the "Hygiene" function according to your needs. Press **【Hygiene】** to select this function.

Press it again to cancel. After selecting the "Hygiene" function, the clothes are sterilized during the drying process, making the clothes cleaner and safer.

Use this function with caution for light, thin or delicate laundry.



Child Lock

1. This machine incorporates a special child safety lock, which can prevent children from carelessly pressing buttons or making the faulty operation.
 2. When the drying cycle is running, press the **【Delay】** and **【Lamp】** buttons at the same time for 3 seconds to start child lock function.
 3. To deactivate the child lock function, the **【Delay】** and **【Lamp】** buttons shall be pressed at the same time for 3 seconds.
-

OPERATION

■ Display

	Child lock
	Remaining Time indicator/Error message
	Cycle phase status (drying, iron dry reached, cool down, cupboard dry reached)
	Clean filters (reminder)
	Empty water container (warning)
	Intensity (dry level) (extra dry, cupboard dry, less dry)
	Lamp
	Signal
	Hygiene
	Anti-crease
	Cotton suitable for cotton and linen loads
	Wool suitable for wool loads
	Synthetics suitable for synthetics loads

OPERATION

■ Programmes

Before starting the appliance

1. Insert the plug into the socket.
2. Put your laundry loosely inside the drum.
3. Close the door. Take care not to trap any items.
4. Switch on the machine.

Programme selector

1. When the LED display screen brightens up, rotate the programme knob to select the desired programme.
2. Select the **【Time】** , **【Signal】** , **【Anti - Crease】** , **【Delay】** , **【Lamp】** , **【Hygiene】** or **【Intensity】** functions for additional options.
3. Press the **【Start/Pause】** button.
4. Press the **【On/Off】** button after the programme has **completed**.

Programme start

The drum will rotate after the programme starts. The cycle phase LED in the display will light up and the remaining programme time will be displayed.

Programme end

1. The drum will stop rotating after the programme ends. The display will show "0:00" and related LED will illuminate. The dryer will start **【Anti-Crease】** function if user doesn't remove the load. (Refer to page 16).
After the load is removed, press **【On/Off】** to switch off if the display is on. Drying is complete, please unplug.
2. Deal with the problems according to "Trouble Shooting" section, if there is an unexpected stop during the drying procedure or the dryer shows an Error Code (Refer to page 25).

OPERATION

■ Drying Programmes Table

Programme		Max Load	Application/Properties	Delay	Time
Cotton	Extra	8.0kg	For single or multi-layer cotton laundry to be dried completely for direct storage.	Y	N
	Iron		For single layer cotton laundry to remain damp for ironing.		
	ECO	8.0kg	For single or multi-layer cotton laundry to be dried completely for direct wear.	Y	N
Mix		3.5kg	For mixed fabrics from cotton and synthetics.	Y	N
Synthetics	Extra	3.5kg	For thick or multi-layer synthetic fabrics to be dried completely .	Y	N
	Cupboard		To dry thin synthetic textiles, which are not ironed, such as easy care shirts, baby cloths or socks.		
Wool		1.0kg	Gentle drying for machine washable wool items. The final moisture content will depend on the load size and the moisture content after spinning.	Y	N
My Cycle		—	Define and save your favourite programme.	Y	—
Bed Linen		4.0kg	To dry bed linen, bed sheets or other large items.	Y	N
Baby Care		1.0kg	To dry small amount of baby clothing.		
Shirts		1.0kg	For easy care laundry, such as shirts and blouses equipped with anti-crease functionality to minimize the ironing effort. Place clothes loosely in the dryer. Once dried, remove quickly and hang it on a clothes hanger.		
Outdoor		3.0kg	To dry sportswear and thin fabrics from polyester, which are not ironed.	Y	N
Time	Time Dry	3.0kg	To dry individual items or complete the drying process of multi-layer fabrics with different drying behavior, such as jackets, pillows or voluminous items. Min 10 min. to max. 150 min.(in 10 min.steps)	Y	Y
	Refresh	1.0kg	To refresh clothes or to remove odors. Min. 20 min to max. 220 min.(in 10 min. steps)		

• Note for Test Institutes:

- 1.ECO programme is used to assess the compliance with EU Regulation 2023/2533 and 2023/2534 for eco design and energy labelling, measured in accordance with EN 61121.
- 2.ECO programme is suitable for drying normal wet cotton laundry and it is the most efficient programme in terms of energy consumption for cotton.

OPERATION

■ Consumption Data ①

Model	Program	Capacity	Final moisture content	Drying Time [h:min]	Energy Consumption	Spin Speed
	ECO	8.0kg	0%	3:30	1.74kWh	1000rpm
		4.0kg	0%	2:05	1.01kWh	1000rpm
	Cotton Extra	8.0kg	-3%	3:50	1.95kWh	1000rpm
		4.0kg	-3%	2:25	1.20kWh	1000rpm
	Cotton Iron	8.0kg	12%	3:00	1.50kWh	1000rpm
		4.0kg	12%	1:35	0.80kWh	1000rpm
	Synthetics Extra	3.5kg	0%	1:10	0.65kWh	800rpm
	Synthetics Cupboard	3.5kg	2%	1:00	0.55kWh	800rpm
	Wool	1.0kg	/	0:25	0.30kWh	/

*Acoustic airborne noise emission of the ECO programme at full load is 65dB.

📌 Note!

- Thick or multi-layered fabrics, e.g. jackets etc., are not easy to dry. You had better choose Cotton Extra programme or use "Intensity" function.
- As uneven material, thick and multi-layered clothes are not easy to dry, it is better to choose the appropriate time drying programme to completely dry them if some parts of the clothes are still damp after programme finishes.
- Loading the household tumble dryer up to the maximum capacity for the respective programmes will contribute to energy savings.

① All data are measured in accordance with EN 61121.

The values given for programmes other than the eco programme are indicative only;


The actual consumption may differ from the values given in the table, depending on the amount of the laundry, type of fabric, residual moisture and any additional functions selected.

MAINTENANCE

■ Cleaning and Care

Empty the water container

1. Pull out and hold the water container with two hands.
2. Tilt the water container, pour out the condensate water into the basin.
3. Install the water container.

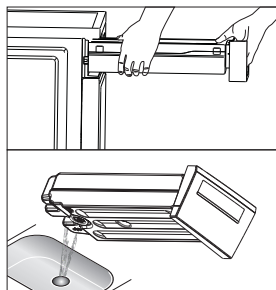

⚠ Warning!

- Empty the water container after each use. Once the water container is filled completely, the programme will be paused and the "🚫" will light on the display. After the container is emptied, the dryer can be restarted by pressing **【Start/Pause】** button.
- Do not drink the condensate water.
- Do not use the dryer without the water container.


Clean the filters

This dryer has a primary door lint filter.

Make sure you clean the door filter after each cycle to avoid increased energy consumption and cycle time.

📌 Note!

- To ensure the double-layer filter can be closed smoothly, the arrows at both ends need to be aligned, and the middle slot and the rib need to be aligned.

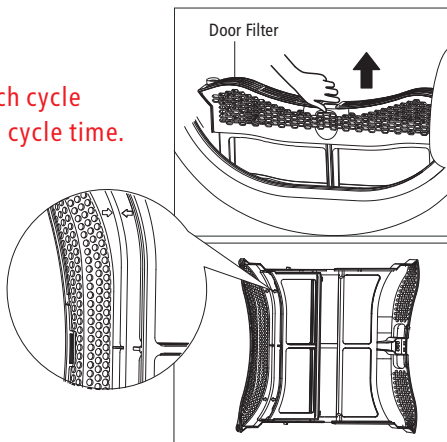

Clean the door filter

1. Open the door.
2. Take out the door filter.
3. **Open the filter and remove the fluff on the filter screen. You can use a vacuum cleaner to remove the lint or clean it by hand.**
4. **Throw lint in the garbage bin and do not wash it down the drain to avoid micro plastics in the used water system.**

📌 Note!

- Take notice of the correct orientation before to insert the door filter.


MAINTENANCE

Clean the heat exchanger

Warning!

Do not touch the heat exchanger with your hand, which may cause an injury.

- As necessary, approx. once every 3 months, remove the fluff from the heat exchanger using a vacuum cleaner with a dusting brush attached.
- Clean the heat exchanger without applying any pressure. Otherwise the heat exchanger could be damaged. The dryer will not dry if the cooling fins are damaged or bent.

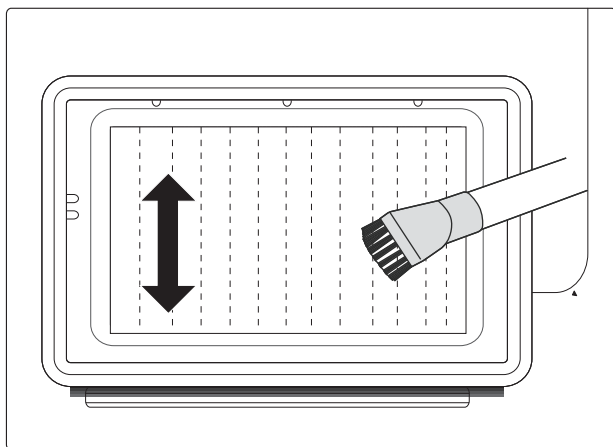

Foreign objects removal


- In case of foreign objects fall inside below the filter compartment, remove the filter, open the heat exchanger area compartment and remove the foreign object making sure not to touch the heat exchanger with bare hands to avoid injuries.

MAINTENANCE

Clean Tumble dryer

⚠ Warning!

- Disconnect the power cord before cleaning!
- Clean the dryer with a wet cloth which is only damped by clean water.
- Do not use solvents, abrasive cleaners, glass cleaners or all-purpose cleaners. These could damage plastic surfaces and other parts.
- Please wear gloves when cleaning.

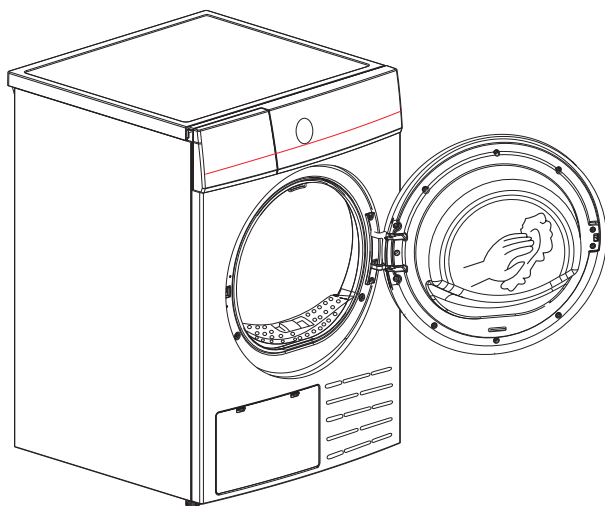

After each use:

- Prepare a wet cloth damped by clean water.
- Clean the door, especially the inside window.
- Clean the sealing around the door opening.
- Clean the humidity sensor inside the drum.
- Take out all the filters, clean the sealing and air flow openings.
- Before starting the dryer, dry all parts with a soft cloth.

MAINTENANCE

■ Trouble Shooting

Many malfunctions and faults that might occur in daily operation can be easily remedied. Time and money will be saved because a service call won't be needed. The following guide may help you to find the reason for a malfunction and correct it.

Display	Reason	Solutions
"E32"	Humidity sensor error	Pull out the plug from the socket. Please contact your local service center if the problem occurs.
"E33"	Temperature sensor error	
"E82"	PCB communication error	
" 	Water pump failure or water level sensor failure	Empty container
	Container is full	

Warning!

- Self-repair or non-professional repair may create safety risk and cease the guarantee.
- If the LED displays other prompt and the dryer does not work, pull out the plug from the socket, please call the service.

Note!

Spare parts are available for a minimum time of 10 years after placing the last unit of present model on the market.

MAINTENANCE

Problem	Solution
• Display is not on	• Check if the mains plug is inserted. • Check if the power supply works. • Check the selected programme . • Press the 【On/Off】 button.
• "  " is lighting	• Check the water container. If it's full, please pour out the condensate water and restart the dryer. • If the container is not full, please restart the dryer directly. • If the "f:ul" icon is still lighting after you have finished the first two steps, please call the service.
• "  " is lighting	• Clean the lint filter.
• Dryer does not start	• Connect the tumble dryer to the mains. • Turn on the tumble dryer. • Check the the door is closed. • Check the programme is set. • Press the 【Start/Pause】 button.
• Degree of dryness was not reached or drying time too long	• Clean lint filter and heat exchanger. • Empty the water container. • Check the drain hose. • Check installation place is appropriate. • Keep the air inlet clean. • Use higher drying intensity level programme or time programme.
• There are humming noises	• The compressor is operating. These noises are normal and do not indicate a fault.
• The dryer switches off at the end of the programme	• The dryer switches off automatically for energy saving. This is not an error but a normal function.

Warning!

If you cannot deal with the problems by yourself and need help:

- Press the **【On/Off】** button.
- Pull out the mains plug and call the service.

MAINTENANCE

■ Technical Specifications

Model	
Parameter	
Dimension(L*W*H)	600*595*845(mm)
Ambient temperature	+2 C ~ +35 C
Rated input power	800W
Rated voltage	220-240V~
Rated frequency	50Hz
Refrigerant	R290
Weight of product	41 kg
Rated capacity	8.0kg
GWP	3
CO ₂ - eq	0.00t
Quantity of refrigerant	120g

Note!

- The rated capacity is the maximum capacity to be dried at one time. Make sure that the dry clothes which are loaded into the appliance do not exceed the rated capacity.
- Do not install the tumble dryer in a room when there is a risk of frost occurring. At temperatures around freezing point the tumble dryer may not be able to operate properly.
- There is a risk of damage if the condensate water is allowed to freeze in the pump, hoses and / or condensate water container.

MAINTENANCE

Product Information Sheet

Model	
Rated Capacity	8.0kg
Dryer Type	Condenser
Energy Efficiency Class	D
Automatic or non-automatic	Automatic
Energy consumption of the ECO programme	
Weighted energy consumption of the ECO programme at full and partial load (E_{tc})	1.19kWh
Standard energy consumption of the ECO programme (SE_c)	1.70kWh
Energy consumption of the ECO programme at full load (E_{dry})	1.74kWh
Energy consumption of the ECO programme at partial load ($E_{dry,1/2}$)	1.01kWh
Energy Efficiency Index (EEI)	70.0
Programme time of the ECO programme	
Weighted programme duration for the ECO programme (T_t)	145min
Programme duration for the ECO programme at full load (T_{dry})	210min
Programme duration for the ECO programme at partial load ($T_{dry,1/2}$)	125min
Condensation efficiency class A (most efficient) to D (least efficient)	D
Average condensation efficiency of the ECO programme at full load (C_{dry})	81%
Average condensation efficiency of the ECO programme at partial load ($C_{dry,1/2}$)	81%
Weighted condensation efficiency for the ECO programme at full and partial load	81%
Acoustic airborne noise emission during the ECO programme	65dB
Power consumption in off mode (P_o)	0.50W
Power consumption in delay start (P_{ds})	4.00W
Does 'standby mode' include the display of information?	No
Power consumption in standby mode (P_{sm})	N/A
Power consumption in 'standby mode' in condition of networked standby (P_{nsm})	N/A

Remarks:

Measured according to EN 61121 and EU Regulation 2023/2533 , 2023/2534 . Energy efficiency class on a scale from A (more efficient) to G (least efficient).